


EasyLink Transmitter

Switching EasyLink
On/Off
Long hold (2 seconds)

Microphone
Openings
(worn 8-10
inches from
speaker's
mouth)



Wear
front side
facing out



Front

Back


Button to
adjust
lavalier
length

Lavalier
with
intergrated
antenna

Clip

LCD
Display


Pen push
for channel
change



Interface for
external
connections



(battery
charger)

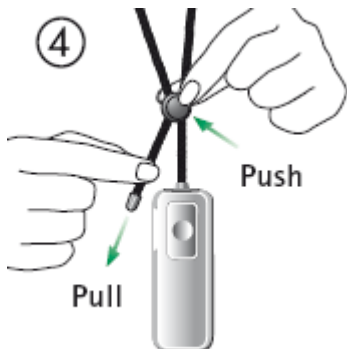

⑥ **LCD Display**

