


Ilink Receiver

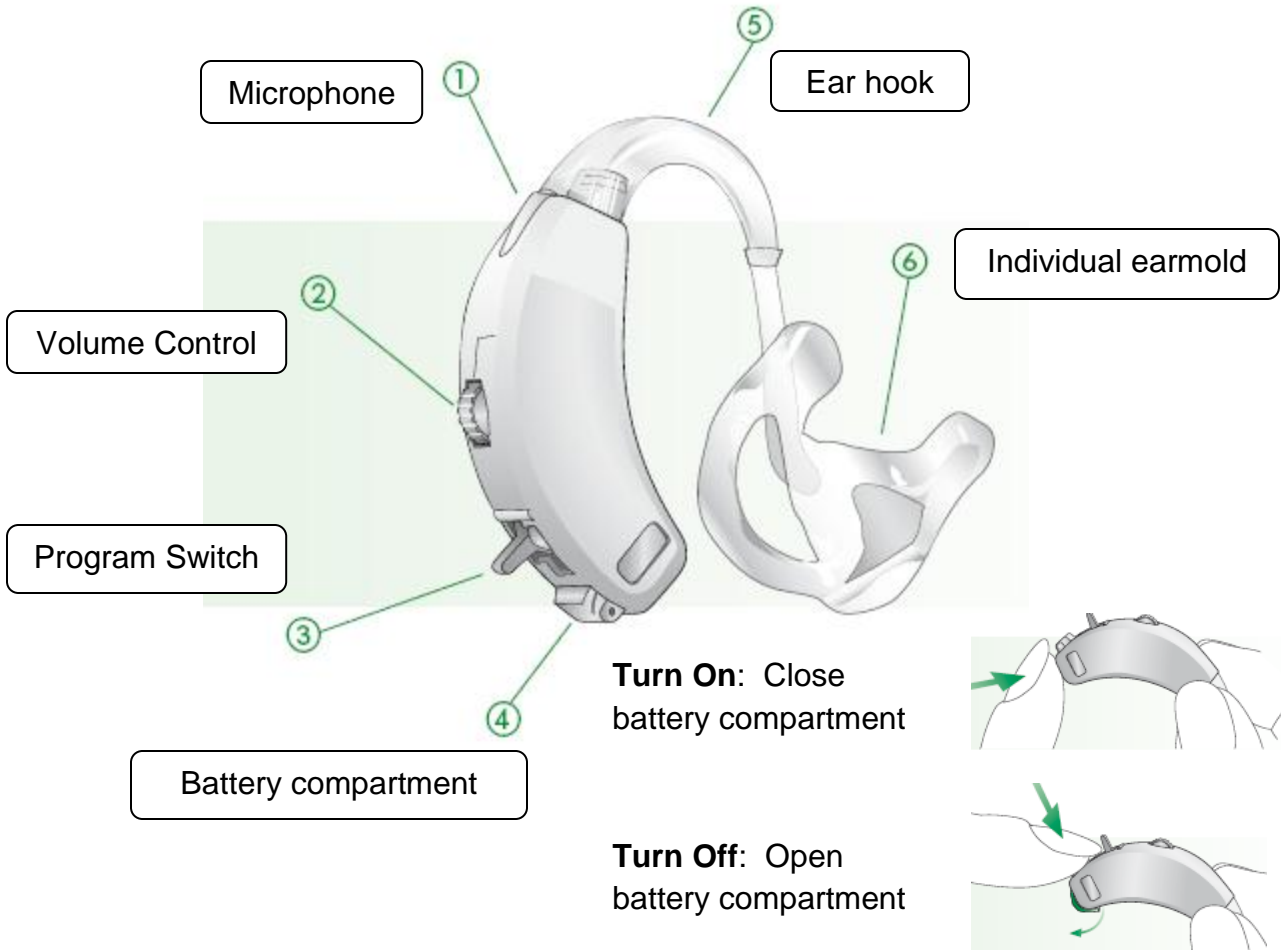

③ Change Program Switch



M Ilink microphone only - FM is not activated.

FM Only FM receiver is activated.

FM/M Both Ilink microphone and FM receiver are activated.

④ Change battery

Size 13 battery

