

Inspiro Transmitter



Soft Reboot

Press and hold all 4 buttons until unit turns on

